# Virtual Technologies Command Reference

This command reference is applicable to the following switches and software versions:

H3C S5560S-EI switch series (Release 6309P01 and later)
H3C S5560S-SI switch series (Release 6310 and later)
H3C S5500V3-SI switch series (Release 6310 and later)
H3C MS4520V2 switch series (MS4520V2-28S and MS4520V2-24TP switches) (Release 6310 and later)
H3C WS5850-WiNet switch series (Release 6308P01 and later)

New H3C Technologies Co., Ltd. http://www.h3c.com

Software version: Release 63xx Document version: 6W101-20200915

#### Copyright © 2020, New H3C Technologies Co., Ltd. and its licensors

#### All rights reserved

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of New H3C Technologies Co., Ltd.

#### Trademarks

Except for the trademarks of New H3C Technologies Co., Ltd., any trademarks that may be mentioned in this document are the property of their respective owners.

#### Notice

The information in this document is subject to change without notice. All contents in this document, including statements, information, and recommendations, are believed to be accurate, but they are presented without warranty of any kind, express or implied. H3C shall not be liable for technical or editorial errors or omissions contained herein.

# Preface

This command reference describes IRF configuration commands for setting up and maintaining an IRF fabric, including:

- Commands for IRF port binding configuration.
- Commands for IRF member ID and priority configuration.
- Commands for detecting IRF splits and maintaining the IRF fabric.

This preface includes the following topics about the documentation:

- Audience
- Conventions
- Documentation feedback

# Audience

This documentation is intended for:

- Network planners.
- Field technical support and servicing engineers.
- Network administrators.

# Conventions

The following information describes the conventions used in the documentation.

#### **Command conventions**

Convention	Description
Boldface	Bold text represents commands and keywords that you enter literally as shown.
Italic	Italic text represents arguments that you replace with actual values.
[]	Square brackets enclose syntax choices (keywords or arguments) that are optional.
{ x   y   }	Braces enclose a set of required syntax choices separated by vertical bars, from which you select one.
[× y ]	Square brackets enclose a set of optional syntax choices separated by vertical bars, from which you select one or none.
{ x   y   } *	Asterisk marked braces enclose a set of required syntax choices separated by vertical bars, from which you select a minimum of one.
[x y ]*	Asterisk marked square brackets enclose optional syntax choices separated by vertical bars, from which you select one choice, multiple choices, or none.
&<1-n>	The argument or keyword and argument combination before the ampersand (&) sign can be entered 1 to n times.
#	A line that starts with a pound (#) sign is comments.

#### **GUI** conventions

Convention	Description	
Boldface	Window names, button names, field names, and menu items are in Boldface. For example, the <b>New User</b> window opens; click <b>OK</b> .	
>	Multi-level menus are separated by angle brackets. For example, <b>File &gt; Create &gt; Folder</b> .	

#### Symbols

Convention	Description
	An alert that calls attention to important information that if not understood or followed can result in personal injury.
$\Delta$ caution:	An alert that calls attention to important information that if not understood or followed can result in data loss, data corruption, or damage to hardware or software.
() IMPORTANT:	An alert that calls attention to essential information.
NOTE:	An alert that contains additional or supplementary information.
Ŷ TIP:	An alert that provides helpful information.

#### Network topology icons

Convention	Description
	Represents a generic network device, such as a router, switch, or firewall.
ROUTER	Represents a routing-capable device, such as a router or Layer 3 switch.
	Represents a generic switch, such as a Layer 2 or Layer 3 switch, or a router that supports Layer 2 forwarding and other Layer 2 features.
	Represents an access controller, a unified wired-WLAN module, or the access controller engine on a unified wired-WLAN switch.
((***))	Represents an access point.
<b>(1</b> )	Represents a wireless terminator unit.
(T)	Represents a wireless terminator.
	Represents a mesh access point.
ə))))	Represents omnidirectional signals.
	Represents directional signals.
	Represents a security product, such as a firewall, UTM, multiservice security gateway, or load balancing device.
<b>*</b>	Represents a security module, such as a firewall, load balancing, NetStream, SSL VPN, IPS, or ACG module.

#### Examples provided in this document

Examples in this document might use devices that differ from your device in hardware model, configuration, or software version. It is normal that the port numbers, sample output, screenshots, and other information in the examples differ from what you have on your device.

# **Documentation feedback**

You can e-mail your comments about product documentation to info@h3c.com. We appreciate your comments.

# Contents

F commands	1
display inf	1
display in configuration	
display in computation	2
display in mix-	
display in topology	4
display mad	5
easy-irf	/
irf auto-update enable ·····	9
irf domain ·····	10
irf link-delay	11
irf mac-address persistent	11
irf member description	12
irf member priority	13
irf member renumber	13
irf-port	14
if-port-configuration active-	15
mad are enable	16
mad bid enable	18
mad enable	10
mad evaluate interface	20
	20
mad ip address	21
mad nd enable	22
mad restore ·····	23
port group interface	24

# **IRF** commands

## display irf

Use **display** irf to display IRF fabric information.

#### **Syntax**

display irf

#### Views

Any view

#### **Predefined user roles**

network-admin

network-operator

#### **Examples**

#### # Display IRF fabric information.

<sysname> display irf</sysname>				
MemberID	Role	Priority	CPU-Mac	Description
1	Loading	1	00e0-fcbe-3102	F1Num001
*+2	Master	1	00e0-fcb1-ade2	F1Num002

\* indicates the device is the master.

+ indicates the device through which the user logs in.

The Bridge MAC of the IRE	7 is: 00e0-fc00-1000	
Auto upgrade : yes		
Mac persistent	: always	
Domain ID : 30		

#### Table 1 Command output

Field	Description	
MemberID	<ul> <li>IRF member ID:</li> <li>ID of the master is prefixed with an asterisk (*) sign.</li> <li>ID of the device where you are logged in is prefixed with a plus (+) sign.</li> </ul>	
Role	<ul> <li>Role of the member device in the IRF fabric:</li> <li>Standby—Subordinate device.</li> <li>Master—Master device.</li> <li>Loading—The device is loading software images.</li> </ul>	
Priority	IRF member priority.	
CPU-MAC	MAC address of the CPU in the device.	
Description	<ul> <li>Description you have configured for the member device.</li> <li>If no description is configured, this field displays a dashed line ().</li> <li>If the description exceeds the maximum number of characters that can be displayed, an ellipsis () is displayed in place of the exceeding text. To display the complete description, use the display</li> </ul>	

Field	Description
	current-configuration command.
Auto upgrade	<ul> <li>Status of the software auto-update feature:</li> <li>yes—Enabled.</li> <li>no—Disabled.</li> </ul>
MAC persistent	<ul> <li>IRF bridge MAC persistence setting:</li> <li>6 min—Bridge MAC address of the IRF fabric remains unchanged for 6 minutes after the address owner leaves.</li> <li>always—Bridge MAC address of the IRF fabric does not change after the address owner leaves.</li> <li>no—Bridge MAC address of the current master replaces the original bridge MAC address as soon as the owner of the original address leaves.</li> </ul>
Domain ID	Domain ID of the IRF fabric. The domain ID you assign to an IRF fabric must uniquely identify the fabric in a multi-IRF fabric network.

#### **Related commands**

display irf configuration

display irf topology

## display irf configuration

Use **display irf configuration** to display basic IRF settings for each member device.

#### Syntax

display irf configuration

#### Views

Any view

#### **Predefined user roles**

network-admin

network-operator

#### Examples

# Display basic IRF settings for all members.

<sysname></sysname>	display :	irf configuration	
MemberID	NewID	IRF-Port1	IRF-Port2
1	1	Ten-GigabitEthernet1/0/49	Ten-GigabitEthernet1/0/51
2	2	Ten-GigabitEthernet2/0/49	Ten-GigabitEthernet2/0/51
		Ten-GigabitEthernet2/0/50	
4	4	Ten-GigabitEthernet4/0/49	Ten-GigabitEthernet4/0/51
			Ten-GigabitEthernet4/0/52

#### Table 2 Command output

Field	Description	
MemberID	Current member ID of the device.	
NewID	Member ID assigned to the device. This member ID takes effect at reboot.	
IRF-Port1	Physical interfaces bound to IRF-port 1. This field displays <b>disable</b> if no physical interfaces are bound to the IRF port.	

Field	Description	
IRF-Port2	Physical interfaces bound to IRF-port 2.	
	This field displays <b>disable</b> if no physical interfaces are bound to the IRF port.	

#### **Related commands**

display irf display irf topology

## display irf link

Use **display irf link** to display IRF link information.

#### Syntax

display irf link

#### Views

Any view

#### Predefined user roles

network-admin

network-operator

#### Examples

#### # Display IRF link information.

<sysname> dia</sysname>	splay irf link	
Member 1		
IRF Port	Interface	Status
1	disable	
2	Ten-GigabitEthernet1/0/51	UP
	Ten-GigabitEthernet1/0/52	ADM
Member 2		
IRF Port	Interface	Status
1	Ten-GigabitEthernet2/0/51	UP
	Ten-GigabitEthernet2/0/52	DOWN
2	disable	

#### Table 3 Command output

Field	Description
Member ID	IRF member ID.
IRF Port	IRF port number: • 1—IRF-port 1. • 2—IRF-port 2.
Interface	Physical interfaces bound to the IRF port. This field displays <b>disable</b> if no physical interfaces have been bound to the IRF port.
Status	<ul> <li>Link state of the IRF physical interface:</li> <li>UP—The link is up.</li> <li>DOWN—The link is down.</li> <li>ADM—The interface has been manually shut down by using the</li> </ul>

Field	Description
	shutdown command.

## display irf topology

Use **display** irf **topology** to display IRF fabric topology information.

### Syntax

display irf topology

#### Views

Any view

#### **Predefined user roles**

network-admin

network-operator

#### Examples

#### # Display the IRF fabric topology.

<Sysname> display irf topology

Topology Info

\_\_\_\_\_

	IRF-Port	1	IRF-Por	t2	
MemberID	Link	neighbor	Link	neighbor	Belong To
1	DOWN		UP	2	000f-cbb8-1a82
2	UP	1	DIS		000f-cbb8-1a82

#### Table 4 Command output

Field	Description	
IRF-Port1	Information about IRF-port 1, including its link state and neighbor.	
IRF-Port2	Information about IRF-port 2, including its link state and neighbor.	
MemberID	IRF member ID.	
Link	<ul> <li>Link state of the IRF port:</li> <li>UP—The IRF link is up.</li> <li>DOWN—The IRF link is down because the port has no physical link or has not been activated by the irf-port-configuration active command.</li> <li>DIS—No physical interfaces have been bound to the IRF port.</li> <li>TIMEOUT—IRF hello interval has timed out.</li> <li>ISOLATE—The device is isolated from the IRF fabric. This issue might be caused by the following reasons: <ul> <li>The IRF fabric does not support the device model.</li> <li>The maximum number of member devices has exceeded the upper limit.</li> </ul> </li> </ul>	
neighbor	IRF member ID of the device connected to the IRF port. This field displays three hyphens () if no device is connected to the port.	
Belong To	IRF fabric that has the device, represented by the CPU MAC address of the master in the IRF fabric.	

#### **Related commands**

display irf display irf configuration

## display mad

Use display mad to display MAD status and settings.

#### **Syntax**

display mad [ verbose ]

#### Views

Any view

#### **Predefined user roles**

network-admin

network-operator

#### Parameters

**verbose**: Displays detailed MAD information. If you do not specify this keyword, the command only displays whether a MAD mechanism is enabled or disabled.

#### **Examples**

#### # Display brief MAD information.

```
<Sysname> display mad
MAD ARP disabled.
MAD ND disabled.
MAD LACP enabled.
MAD BFD enabled.
# Display detailed MAD information.
<Sysname> display mad verbose
Multi-active recovery state: No
Excluded ports (user-configured):
  Bridge-Aggregation4
  Vlan-interface999
Excluded ports (system-configured):
  IRF physical interfaces:
    Ten-GigabitEthernet1/0/49
    Ten-GigabitEthernet1/0/50
    Ten-GigabitEthernet2/0/49
    Ten-GigabitEthernet2/0/50
  BFD MAD interfaces:
    GigabitEthernet1/0/10
    GigabitEthernet2/0/10
    Vlan-interface3
  Member interfaces of excluded interface Bridge-Aggregation 4:
    GigabitEthernet1/0/11
    GigabitEthernet2/0/11
MAD ARP disabled.
MAD ND disabled.
```

MAD LACP enabl	ed interface: Br	idge-Aggregatio	on 1
MAD status	:	Normal	
Member ID	Port		MAD status
1	GigabitEther	net1/0/1	Normal
2	GigabitEther	net2/0/1	Normal
MAD BFD enable	d interface: VLA	N-interface 3	
MAD status	:	Normal	
Member ID	MAD IP address	Neighbor	MAD status
1	192.168.1.1/24	2	Normal
2	192.168.1.2/24	1	Normal

#### Table 5 Command output

Field	Description		
MAD ARP disabled.	Status of ARP MAD.		
MAD ND disabled.	Status of ND MAD. This field displays <b>MAD ND enabled</b> if ND MAD is enabled.		
MAD LACP enabled.	Status of LACP MAD. This field displays <b>MAD LACP disabled</b> if LACP MAD is disabled.		
MAD BFD enabled.	Status of BFD MAD. This field displays <b>MAD BFD disabled</b> if BFD MAD is disabled.		
Multi-active recovery state	<ul> <li>Whether the IRF fabric is in Recovery state:</li> <li>Yes—The IRF fabric is in Recovery state. When MAD detects that an IRF fabric has split into multiple IRF fabrics, it allows one fabric to forward traffic. All the other IRF fabrics are set to the Recovery state. In Recovery state, MAD shuts down all common network interfaces in the fabric except for the system- and user-excluded network interfaces.</li> <li>No—The IRF fabric is not in Recovery state. It is active and can forward traffic.</li> </ul>		
Excluded ports (user-configured)	Network interfaces manually configured to not shut down when the IRF fabric transits to the Recovery state.		
Excluded ports (system-configured)	<ul> <li>Network interfaces set to not shut down by the system when the IRF fabric transits to the Recovery state. These interfaces are not manually configured.</li> <li>IRF physical interfaces.</li> <li>BFD MAD interfaces: <ul> <li>VLAN interfaces used for BFD MAD and the Layer 2 Ethernet ports in the VLANs.</li> <li>Management Ethernet ports used for BFD MAD.</li> </ul> </li> <li>Member interfaces of a Layer 2 aggregate interface if the aggregate interface is excluded from the MAD shutdown action.</li> </ul>		
MAD ARP enabled interface:	Interfaces on which ARP MAD is enabled. This field displays <b>MAD ARP disabled</b> if ARP MAD is disabled.		
MAD ND enabled interface:	Interfaces on which ND MAD is enabled. This field displays <b>MAD ND disabled</b> if ND MAD is disabled.		
MAD LACP enabled interface	Interface on which LACP MAD is enabled. This field is displayed for each interface enabled with LACP MAD. This field displays <b>MAD LACP disabled</b> if LACP MAD is disabled.		
MAD status	LACP MAD operating status:		

Field	Description
	Normal—LACP MAD is operating correctly.
	• <b>Faulty</b> —LACP MAD is not operating correctly. Verify the following items:
	<ul> <li>Verify that the ports on LACP MAD links are up.</li> </ul>
	<ul> <li>Verify that the intermediate device supports extended LACPDUs.</li> </ul>
	<ul> <li>Verify that all member devices have member ports used for LACP MAD.</li> </ul>
	LACP MAD details:
Member ID	• Member ID—IRF member ID of a device.
Port	• <b>Port</b> —Member ports of the aggregate interface used for LACP MAD.
MAD status	• <b>MAD status</b> —LACP MAD operating state on a member port. Values include <b>Normal</b> and <b>Faulty</b> .
MAD BFD enabled	Layer 3 interface on which BFD MAD is enabled.
interface:	This field displays <b>MAD BFD disabled</b> if BFD MAD is disabled.
	BFD MAD operating status:
	Normal—BFD MAD is operating correctly.
MAD status	• <b>Faulty</b> —BFD MAD is not operating correctly. Check the BFD MAD link for connectivity issues.
	• <b>N/A</b> —BFD MAD link status cannot be detected. If BFD MAD is enabled on a management Ethernet port, it is normal that this field displays <b>N/A</b> .
	BFD MAD details:
	• Member ID—IRF member ID of the local device.
	• MAD IP address—MAD IP address of a member device.
Member ID	• <b>Neighbor</b> —IRF member ID of the neighboring member device.
MAD IP address	• <b>MAD status</b> —BFD MAD link state. The following values are available:
Neighbor	<ul> <li>Normal—BFD MAD is operating correctly.</li> </ul>
MAD status	<ul> <li>Faulty—BFD MAD is not operating correctly. Check the BFD MAD link for connectivity issues.</li> </ul>
	<ul> <li>N/A—BFD MAD link status cannot be detected. If BFD MAD is enabled on a management Ethernet port, it is normal that this field displays N/A.</li> </ul>

## easy-irf

Use **easy-irf** to bulk-configure basic IRF settings for an IRF member device.

#### Syntax

```
easy-irf [ member member-id [ renumber new-member-id ] domain domain-id
[ priority priority ] [ irf-port1 interface-list1 ] [ irf-port2
interface-list2 ] ]
```

#### Views

System view

#### **Predefined user roles**

network-admin

#### **Parameters**

**member** member-id: Specifies the member ID of a member device. The value range for the member ID is 1 to 10.

**renumber** new-member-id: Specifies a new member ID for the device. The value range for the member ID is 1 to 10. The member device automatically reboots for the new member ID to take effect. If you do not specify this option, the command does not change the member ID.

**domain** *domain-id*: Specifies an IRF domain ID in the range of 0 to 4294967295. Assign the same domain ID to all devices you are adding to the same IRF fabric.

**priority** *priority*: Specifies an IRF priority in the range of 1 to 32. The greater the priority value, the higher the priority. A member with higher priority is more likely to be the master.

**irf-port1** interface-list1: Specifies interfaces bound to IRF-port 1. The interface-list1 argument represents a space-separated list of up to eight interface items. Each interface item specifies one interface in the interface-type interface-number form.

**irf-port2** *interface-list2*: Specifies interfaces bound to IRF-port 2. A physical interface can be bound to only one IRF port. The *interface-list2* argument represents a space-separated list of up to eight interface items. Each interface item specifies one interface in the *interface-type interface-number* form.

#### **Usage guidelines**

This command bulk-configures basic IRF settings for a member device, including the member ID, domain ID, priority, and IRF port bindings.

The easy IRF feature provides the following configuration methods:

- Interactive method—Enter the easy-irf command without parameters. The system will guide you to set the parameters step by step.
- **Non-interactive method**—Enter the **easy-irf** command with parameters.

As a best practice, use the interactive method if you are new to IRF.

If you execute this command multiple times, the following settings take effect:

- The most recent settings for the member ID, domain ID, and priority.
- IRF port bindings added through repeated executions of the command.

The software supports binding a maximum of eight physical interfaces to an IRF port. However, you might be unable to bind as many as eight physical interfaces to an IRF port due to hardware restrictions.

When you specify physical interfaces for an IRF port, you must follow the IRF port binding requirements in *Virtual Technologies Configuration Guide*.

If you specify physical interfaces by using the interactive method, you must also follow these restrictions and guidelines:

- Do not enter spaces between the interface type and interface number.
- Use a comma (,) to separate two physical interfaces. No spaces are allowed between interfaces.

To remove an IRF physical interface from an IRF port, you must use the **undo port group interface** command in IRF port view.

#### Examples

# Bulk-configure basic IRF settings by using the non-interactive method. Change the member ID from 2 to 3, set the domain ID to 10, configure the member priority as 10, and bind Ten-GigabitEthernet 2/0/51 and Ten-GigabitEthernet 2/0/52 to IRF-port 1.

<Sysname> system-view

[Sysname] easy-irf member 2 renumber 3 domain 10 priority 10 irf-port1 ten-gigabitethernet 2/0/51 ten-gigabitethernet 2/0/52

Configuration summary for member 2

Are you sure to use these settings to set up IRF? [Y/N]  ${\tt y}$ 

Starting to configure IRF...

Configuration succeeded.

The device will reboot for the new member ID to take effect. Continue? [Y/N] y

# Bulk-configure basic IRF settings by using the interactive method. Change the member ID from 2 to 3, set the domain ID to 10, configure the member priority as 10, and bind Ten-GigabitEthernet 2/0/51 and Ten-GigabitEthernet 2/0/52 to IRF-port 1.

<Sysname> system-view [Sysname] easy-irf Welcome to use easy IRF. To skip the current step, enter a dot sign (.). To return to the previous step, enter a minus sign (-). To use the default value (enclosed in []) for each parameter, press Enter without entering a value. To quit the setup procedure, press CTRL+C. Select a member by its ID <2> [2]:2 Specify a new member ID <1~10> [1]: 3 Specify a domain ID <0~4294967295> [0]: 10 Specify a priority <1~32> [1]: 10 Specify IRF-port 1 bindings (a physical interface or a comma-separated physical interface list)[Disabled]: ten-gigabitethernet2/0/51,ten-gigabitethernet2/0/52 Specify IRF-port 2 bindings (a physical interface or a comma-separated physical interface list)[Disabled]: Configuration summary for member 2 IRF new member ID: 3 IRF domain ID : 10 IRF priority : 10 IRF-port 1 : Ten-GigabitEthernet2/0/51, Ten-GigabitEthernet2/0/52 IRF-port 2 : Disabled Are you sure to use these settings to set up IRF? [Y/N] y Starting to configure IRF ... Configuration succeeded. The device will reboot for the new member ID to take effect. Continue?  $[\ensuremath{\,Y/N}]\xspace$  y

## irf auto-update enable

Use irf auto-update enable to enable the software auto-update feature. Use undo irf auto-update enable to disable the software auto-update feature.

#### Syntax

irf auto-update enable

#### undo irf auto-update enable

#### Default

Software auto-update is enabled.

#### Views

System view

#### **Predefined user roles**

network-admin

#### Usage guidelines

This command automatically propagates the current software images of the master device in the IRF fabric to any devices you are adding to the IRF fabric.

To ensure a successful software update, verify that the new device you are adding to the IRF fabric has sufficient storage space for the new software images. If sufficient storage space is not available, the device automatically deletes the current software images. If the reclaimed space is still insufficient, the device cannot complete the auto-update. You must reboot the device, and then access the BootWare menu to delete files.

#### **Examples**

# Enable the software auto-update feature.

<Sysname> system-view [Sysname] irf auto-update enable

## irf domain

Use irf domain to assign a domain ID to the IRF fabric.

Use undo irf domain to restore the default.

#### Syntax

irf domain domain-id

undo irf domain

#### Default

The IRF domain ID is 0.

#### Views

System view

#### Predefined user roles

network-admin

#### Parameters

domain-id: Specifies a domain ID for the IRF fabric. The value range is 0 to 4294967295.

#### **Usage guidelines**

One IRF fabric forms one IRF domain. IRF uses IRF domain IDs to uniquely identify IRF fabrics and prevent IRF fabrics from interfering with one another.

If one IRF fabric uses another IRF fabric as the intermediate device for LACP MAD, ARP MAD, or ND MAD, you must assign the two IRF fabrics different domain IDs for correct split detection. False detection causes IRF split.

An IRF fabric has only one IRF domain ID. You can change the IRF domain ID by using the following commands: **irf domain**, **mad enable**, **mad arp enable**, or **mad nd enable**. The IRF domain IDs configured by using these commands overwrite each other.

#### **Examples**

# Set the IRF domain ID to 10.

```
<Sysname> system-view
[Sysname] irf domain 10
```

### irf link-delay

Use irf link-delay to set a delay for the IRF ports to report a link status change event.

Use undo irf link-delay to restore the default.

#### Syntax

irf link-delay interval

undo irf link-delay

#### Default

The delay time is 4 seconds.

#### Views

System view

#### Predefined user roles

network-admin

#### **Parameters**

*interval*: Sets the IRF link status change report delay, in the range of 0 to 10000 milliseconds. If the interval is set to 0, link status change events are reported without any delay.

#### Usage guidelines

The device delays reporting link status change events of an IRF port, but it does not delay reporting link status change events of an IRF physical interface.

#### **Examples**

# Set the IRF link status change report delay to 300 milliseconds.

```
<Sysname> system-view
[Sysname] irf link-delay 300
```

### irf mac-address persistent

Use irf mac-address persistent to configure IRF bridge MAC persistence.

Use undo irf mac-address persistent to disable IRF bridge MAC persistence.

#### Syntax

irf mac-address persistent { always | timer }
undo irf mac-address persistent

#### Default

The IRF bridge MAC address remains unchanged for 6 minutes after the address owner leaves.

#### Views

System view

#### Predefined user roles

network-admin

#### **Parameters**

**always**: Enables the IRF bridge MAC address to be permanent. The IRF bridge MAC address does not change after the address owner leaves the fabric.

timer: Enables the IRF bridge MAC address to remain unchanged for 6 minutes after the address owner leaves. If the owner rejoins the IRF fabric within the time limit, the IRF bridge MAC address does not change. If the owner does not rejoin the IRF fabric within the time limit, the IRF fabric uses the bridge MAC address of the current master as the bridge MAC address.

#### **Usage guidelines**

If the **undo** form of this command is used, bridge MAC address of the current master replaces the original IRF bridge MAC as soon as the original address owner leaves.

If ARP MAD or ND MAD is used with the spanning tree feature, disable IRF bridge MAC persistence by using the **undo irf mac-address persistent** command.

If the IRF fabric uses a daisy-chain topology and has aggregate links with upstream or downstream devices, do not execute the undo irf mac-address persistent command. Use of this command might result in transmission delay or packet loss after the address owner leaves or reboots.

If the IRF fabric has multichassis aggregate links, do not use the **undo irf mac-address persistent** command. Use of this command might cause traffic disruption.

By default, an IRF fabric uses the bridge MAC address of the master device as its bridge MAC address.

On a switched LAN, the IRF bridge MAC address must be unique for correct traffic transmission.

When IRF fabrics merge, IRF ignores the IRF bridge MAC address and checks the bridge MAC address of each member device in the IRF fabrics. IRF merge fails if any two member devices have the same bridge MAC address.

#### Examples

# Enable the IRF bridge MAC address to persist forever.

<Sysname> system-view
[Sysname] irf mac-address persistent always

## irf member description

Use irf member description to configure a description for an IRF member device.

Use undo irf member description to restore the default.

#### Syntax

irf member member-id description text

undo irf member member-id description

#### Default

No description is configured for an IRF member device.

#### Views

System view

#### **Predefined user roles**

network-admin

#### Parameters

member-id: Specifies the ID of an IRF member.

*text*: Specifies a description, a string of 1 to 127 characters.

#### **Examples**

# Configure the description as F1Num001 for IRF member 1. <Sysname> system-view

[Sysname] irf member 1 description F1Num001

## irf member priority

Use irf member priority to change the priority of an IRF member device.

Use undo irf member priority to restore the default.

#### Syntax

irf member member-id priority priority

undo irf member member-id priority

#### Default

The IRF member priority is 1.

#### Views

System view

#### **Predefined user roles**

network-admin

#### Parameters

member-id: Specifies an IRF member ID. The value range for IRF member IDs is 1 to 10.

*priority*: Sets priority in the range of 1 to 32. The greater the priority value, the higher the priority. A member with higher priority is more likely to be the master.

#### Usage guidelines

The new priority setting takes effect at the next master election, but it does not trigger a master election.

#### Examples

# Set the priority of IRF member 2 to 32.

<Sysname> system-view [Sysname] irf member 2 priority 32

### irf member renumber

Use irf member renumber to change the member ID of an IRF member device.

Use undo irf member renumber to restore the previous IRF member ID of the device.

#### Syntax

irf member member-id renumber new-member-id

undo irf member member-id renumber

#### Default

The IRF member ID is 1.

#### Views

System view

#### **Predefined user roles**

network-admin

#### **Parameters**

member-id: Specifies the ID of an IRF member. The value range for IRF member IDs is 1 to 10.

*new-member-id*: Assigns a new ID to the IRF member. The value range for IRF member IDs is 1 to 10.

#### Usage guidelines

#### $\triangle$ CAUTION:

IRF member ID change can invalidate member ID-related settings, including interface and file path settings, and cause data loss. Make sure you fully understand its impact on your live network.

To have the new ID take effect, you must reboot the IRF member. To cancel the member ID change before you reboot the member device, use the **undo irf member renumber** command. In the command, set the new member ID to be the same as the old member ID.

When adding a device into an IRF fabric, you must assign a unique IRF member ID to the device. If its IRF member ID has been used in the IRF fabric, the device cannot join the IRF fabric.

Interchanging member IDs between IRF member devices might cause undesirable configuration changes and data loss. For example, the IRF member IDs of Device A and Device B are 2 and 3, respectively. After you interchange their member IDs, their port settings also interchange.

#### **Examples**

# Change the ID of an IRF member device from 1 to 2.

<Sysname> display irf

[Sysname] irf member 1 renumber 2 Renumbering the member ID may result in configuration change or loss. Continue?[Y/N]Y

# Before rebooting the device, cancel the change in the preceding example.

[Sysname] undo irf member 1 renumber

Renumbering the member ID may result in configuration change or loss. Continue?[Y/N]y

If you reboot the device after executing the **irf member 1 renumber 2** command, the device member ID changes to 2 at system reboot. Using **undo irf member 1 renumber** cannot restore the member ID to 1. You must use the **irf member 2 renumber 1** command to reconfigure the member ID.

### irf-port

Use **irf-port** to enter IRF port view.

Use undo irf-port to remove all port bindings on an IRF port.

#### Syntax

irf-port member-id/irf-port-number

undo irf-port member-id/irf-port-number

#### Views

System view

#### **Predefined user roles**

network-admin

#### **Parameters**

member-id: Specifies an IRF member device by its member ID.

*irf-port-number*: Specifies an IRF port on the member device. The *irf-port-number* argument represents the IRF port index and must be 1 or 2.

#### **Usage guidelines**

To bind physical interfaces to an IRF port, you must enter IRF port view.

#### **Examples**

# Enter IRF-port 2/1 view.
<Sysname> system-view
[Sysname] irf-port 2/1
[Sysname-irf-port2/1]

#### **Related commands**

port group interface

## irf-port-configuration active

Use irf-port-configuration active to activate IRF ports.

#### Syntax

irf-port-configuration active

#### Views

System view

#### **Predefined user roles**

network-admin

#### Usage guidelines

After connecting the physical interfaces between two devices and binding them to the correct IRF ports, you must use this command to activate the settings on the IRF ports. This command merges the two devices into one IRF fabric.

The system activates the IRF port settings automatically in the following situations:

- The configuration file that the device starts with contains IRF port bindings.
- You are binding physical interfaces to an IRF port after an IRF fabric is formed.

#### Examples

To configure and activate IRF-port 1/2 when the port is in DIS state:

# Bind Ten-GigabitEthernet 1/0/51 to IRF-port 1/2.

<Sysname> system-view

```
[Sysname] interface ten-gigabitethernet 1/0/51
[Sysname-Ten-GigabitEthernet1/0/51] shutdown
[Sysname-Ten-GigabitEthernet1/0/51] quit
[Sysname] irf-port 1/2
[Sysname-irf-port1/2] port group interface ten-gigabitethernet 1/0/51
You must perform the following tasks for a successful IRF setup:
Save the configuration after completing IRF configuration.
Execute the "irf-port-configuration active" command to activate the IRF ports.
[Sysname-irf-port1/2] quit
[Sysname] interface ten-gigabitethernet 1/0/51
[Sysname] interface ten-gigabitethernet 1/0/51
[Sysname-Ten-GigabitEthernet1/0/51] undo shutdown
[Sysname-Ten-GigabitEthernet1/0/51] quit
# Save the configuration so the IRF port settings can take effect after the device reboots.
```

```
[Sysname] save
```

```
The current configuration will be written to the device. Are you sure? [Y/N]:y Please input the file name(*.cfg)[flash:/startup.cfg]
```

(To leave the existing filename unchanged, press the enter key):

flash:/startup.cfg exists, overwrite? [Y/N]:y

Validating file. Please wait.....

Saved the current configuration to mainboard device successfully.

#### # Activate the IRF port.

[Sysname] irf-port-configuration active

## mad arp enable

Use **mad** arp enable to enable ARP MAD.

Use undo mad arp enable to disable ARP MAD.

#### Syntax

mad arp enable

undo mad arp enable

#### Default

ARP MAD is disabled.

#### Views

Management Ethernet interface view

VLAN interface view

#### **Predefined user roles**

network-admin

#### **Usage guidelines**

Do not configure ARP MAD together with LACP MAD or BFD MAD, because they handle collisions differently.

When you configure ARP MAD on a VLAN interface, follow these restrictions and guidelines:

Category	Restrictions and guidelines	
ARP MAD VLAN	• Do not enable ARP MAD on VLAN-interface 1.	

Category	Restrictions and guidelines
	<ul> <li>If you are using an intermediate device, perform the following tasks:         <ul> <li>On the IRF fabric and the intermediate device, create a VLAN for ARP MAD.</li> <li>On the IRF fabric and the intermediate device, assign the ports of ARP MAD links to the ARP MAD VLAN.</li> <li>On the IRF fabric, create a VLAN interface for the ARP MAD VLAN.</li> </ul> </li> <li>As a best practice, do not use the ARP MAD VLAN for any other purposes.</li> </ul>
ARP MAD and feature configuration	<ul> <li>If an intermediate device is used, make sure the following requirements are met:</li> <li>Run the spanning tree feature between the IRF fabric and the intermediate device to ensure that there is only one ARP MAD link in forwarding state. For more information about the spanning tree feature and its configuration, see <i>Layer 2—LAN Switching Configuration Guide</i>.</li> <li>Enable the IRF fabric to change its bridge MAC address as soon as the address owner leaves.</li> <li>If the intermediate device is also an IRF fabric, assign the two IRF fabrics different domain IDs for correct split detection.</li> </ul>

When you configure ARP MAD on a management Ethernet port, follow these restrictions and guidelines:

Category	Restrictions and guidelines	
Management Ethernet ports for ARP MAD	Connect a management Ethernet port on each member device to the common Ethernet ports on the intermediate device.	
ARP MAD VLAN	On the intermediate device, create a VLAN for ARP MAD, and assign the ports used for ARP MAD to the VLAN. On the IRF fabric, you do not need to assign the management Ethernet ports to the VLAN.	
ARP MAD and feature configuration	<ul> <li>Enable the IRF fabric to change its bridge MAC address as soon as the address owner leaves.</li> <li>If the intermediate device is also an IRF fabric, assign the two IRF fabric different domain IDs for correct split detection.</li> </ul>	

When you use the **mad arp enable** command, the system prompts you to enter a domain ID. If you do not want to change the current domain ID, press **enter** at the prompt.

An IRF fabric has only one IRF domain ID. You can change the IRF domain ID by using the following commands: **irf domain**, **mad enable**, **mad arp enable**, or **mad nd enable**. The IRF domain IDs configured by using these commands overwrite each other.

#### **Examples**

# Enable ARP MAD on VLAN-interface 3.

```
<Sysname> system-view
[Sysname] interface vlan-interface 3
[Sysname-Vlan-interface3] mad arp enable
You need to assign a domain ID (range: 0-4294967295)
[Current domain is: 0]: 1
The assigned domain ID is: 1
```

#### **Related commands**

irf domain

## mad bfd enable

Use mad bfd enable to enable BFD MAD.

Use undo mad bfd enable to disable BFD MAD.

#### Syntax

mad bfd enable

undo mad bfd enable

#### Default

BFD MAD is disabled.

#### Views

VLAN interface view

Management Ethernet interface view

#### **Predefined user roles**

network-admin

#### Usage guidelines

Do not configure BFD MAD together with ARP MAD or ND MAD, because they handle collisions differently.

	When you configure	BFD MAD on a	VLAN interface.	follow these auidelines:
--	--------------------	--------------	-----------------	--------------------------

Category	Restrictions and guidelines
BFD MAD VLAN	<ul> <li>Do not enable BFD MAD on VLAN-interface 1.</li> <li>If you are using an intermediate device, perform the following tasks:         <ul> <li>On the IRF fabric and the intermediate device, create a VLAN for BFD MAD.</li> <li>On the IRF fabric and the intermediate device, assign the ports of BFD MAD links to the BFD MAD VLAN.</li> <li>On the IRF fabric, create a VLAN interface for the BFD MAD VLAN.</li> </ul> </li> <li>On the IRF fabrics on the network use different BFD MAD VLAN.</li> <li>Make sure the IRF fabrics on the network use different BFD MAD VLANs.</li> <li>Make sure the BFD MAD VLAN contains only ports on the BFD MAD links. Exclude a port from the BFD MAD VLAN if that port is not on a BFD MAD link. If you have assigned that port to all VLANs by using the port trunk permit vlan all command, use the undo port trunk permit command to exclude that port from the BFD MAD VLAN.</li> </ul>
BFD MAD VLAN and feature compatibility	<ul> <li>Do not use the BFD MAD VLAN for any purposes other than configuring BFD MAD.</li> <li>Use only the mad bfd enable and mad ip address commands on the BFD MAD-enabled VLAN interface. If you configure other features, both BFD MAD and other features on the interface might run incorrectly.</li> <li>Disable the spanning tree feature on any Layer 2 Ethernet ports in the BFD MAD VLAN. The MAD feature is mutually exclusive with the spanning tree feature.</li> </ul>
MAD IP address	• To avoid network issues, only use the <b>mad ip address</b> command to configure IP addresses on the BFD MAD-enabled VLAN interface. Do not configure an IP address by using the <b>ip address</b> command or configure a VRRP virtual address on the BFD MAD-enabled VLAN interface.

Category	Restrictions and guidelines
	Make sure all the MAD IP addresses are on the same subnet.

When you configure BFD MAD on a management Ethernet port, follow these restrictions and guidelines:

Category	Restrictions and guidelines
Management Ethernet ports for BFD MAD	Connect a management Ethernet port on each member device to the common Ethernet ports on the intermediate device.
BFD MAD VLAN	<ul> <li>On the intermediate device, create a VLAN for BFD MAD, and assign the ports used for BFD MAD to the VLAN. On the IRF fabric, you do not need to assign the management Ethernet ports to the VLAN.</li> <li>Make sure the IRF fabrics on the network use different BFD MAD VLANs.</li> <li>Make sure the BFD MAD VLAN on the intermediate device contains only ports on the BFD MAD links.</li> </ul>
MAD IP address	<ul> <li>Use the mad ip address command instead of the ip address command to configure MAD IP addresses on the BFD MAD-enabled management Ethernet ports.</li> <li>Make sure all the MAD IP addresses are on the same subnet.</li> </ul>

#### Examples

# Enable BFD MAD on VLAN-interface 3.

```
<Sysname> system-view
[Sysname] interface vlan-interface 3
[Sysname-Vlan-interface3] mad bfd enable
```

## mad enable

Use **mad** enable to enable LACP MAD.

Use undo mad enable to disable LACP MAD.

#### Syntax

mad enable

undo mad enable

#### Default

LACP MAD is disabled.

#### Views

Aggregate interface view

#### **Predefined user roles**

network-admin

#### **Usage guidelines**

LACP MAD handles collisions differently than ARP MAD and ND MAD. To avoid conflicts, do not enable LACP MAD together with ARP MAD and ND MAD on an IRF fabric.

LACP MAD requires a device that supports extended LACPDUs for MAD to act as the intermediate device. You must set up a dynamic link aggregation group that spans all IRF member devices between the IRF fabric and the intermediate device. To enable dynamic link aggregation, configure the link-aggregation mode dynamic command on the aggregate interface.

If one IRF fabric uses another IRF fabric as the intermediate device for LACP MAD, you must assign the two IRF fabrics different domain IDs for correct split detection. False detection causes IRF split.

When you use the **mad enable** command, the system prompts you to enter a domain ID. If you do not want to change the current domain ID, press **enter** at the prompt.

An IRF fabric has only one IRF domain ID. You can change the IRF domain ID by using the following commands: **irf domain**, **mad enable**, **mad arp enable**, or **mad nd enable**. The IRF domain IDs configured by using these commands overwrite each other.

#### **Examples**

# Enable LACP MAD on Bridge-Aggregation 1, a Layer 2 dynamic aggregate interface.

```
<Sysname> system-view
[Sysname] interface bridge-aggregation 1
[Sysname-Bridge-Aggregation1] link-aggregation mode dynamic
[Sysname-Bridge-Aggregation1] mad enable
You need to assign a domain ID (range: 0-4294967295)
[Current domain ID is: 0]: 1
The assigned domain ID is: 1
```

#### **Related commands**

irf domain

### mad exclude interface

Use **mad exclude interface** to exclude an interface from being shut down when the IRF fabric transits to the Recovery state upon detection of a multi-active collision.

Use **undo mad exclude interface** to configure the IRF fabric to shut down an interface when it transits to the Recovery state upon detection of a multi-active collision.

#### Syntax

mad exclude interface interface-type interface-number

undo mad exclude interface interface-type interface-number

#### Default

Except for the network interfaces automatically excluded by the system, all network interfaces are shut down when the IRF fabric transits to the Recovery state. The system automatically excludes the following network interfaces from being shut down:

- IRF physical interfaces.
- Interfaces used for BFD MAD.
- Member interfaces of an aggregate interface if the aggregate interface is excluded from being shut down.

#### Views

System view

#### Predefined user roles

network-admin

#### Parameters

interface-type interface-number: Specifies an interface by its type and number.

#### **Usage guidelines**

If an interface must be kept in up state for special purposes such as Telnet connection, exclude the interface from the shutdown action. As a best practice to avoid incorrect traffic forwarding, do not exclude any interfaces except the interfaces used for Telnet.

The interfaces that have been shut down by MAD come up when the member devices reboot to join the recovered IRF fabric. If the active IRF fabric fails before the IRF link is recovered, use the **mad restore** command on the inactive IRF fabric to recover the inactive IRF fabric. This command also brings up all interfaces that were shut down by MAD.

#### **Examples**

# Exclude GigabitEthernet 1/0/1 from being shut down when the MAD status transits to Recovery. <Sysname> system-view

[Sysname] mad exclude interface gigabitethernet 1/0/1

#### **Related commands**

mad restore

## mad ip address

Use mad ip address to assign a MAD IP address to an IRF member device for BFD MAD.

Use undo mad ip address to delete the MAD IP address for an IRF member device.

#### Syntax

```
mad ip address ip-address { mask | mask-length } member member-id
```

```
undo mad ip address ip-address { mask | mask-length } member member-id
```

#### Default

No MAD IP address is configured for an IRF member device.

#### Views

VLAN interface view

Management Ethernet interface view

#### **Predefined user roles**

network-admin

#### **Parameters**

*ip-address*: Specifies an IP address in dotted decimal notation.

mask: Specifies a subnet mask in decimal dotted notation.

mask-length: Specifies a subnet mask in length, in the range of 0 to 32.

member member-id: Specifies the ID of an IRF member.

#### **Usage guidelines**

To use BFD MAD, configure a MAD IP address for each IRF member. Make sure all the MAD IP addresses are on the same subnet.

Do not configure a MAD IP address by using the **ip address** command or configure a VRRP virtual address on the BFD MAD-enabled port or interface.

The master attempts to establish BFD sessions with other member devices by using its MAD IP address as the source IP address.

- If the IRF fabric is integrated, only the MAD IP address of the master takes effect. The master cannot establish a BFD session with any other member. If you execute the **display bfd session** command, the state of the BFD sessions is **Down**.
- When the IRF fabric splits, the IP addresses of the masters in the partitioned IRF fabrics take effect. The masters can establish a BFD session. If you execute the **display bfd session** command, the state of the BFD session between the two devices is **Up**.

#### **Examples**

# Assign a MAD IP address to IRF member 1 on VLAN-interface 3.

<Sysname> system-view [Sysname] interface vlan-interface 3 [Sysname-Vlan-interface3] mad ip address 192.168.0.1 255.255.255.0 member 1

# Assign a MAD IP address to IRF member 2 on VLAN-interface 3.

[Sysname-Vlan-interface3] mad ip address 192.168.0.2 255.255.255.0 member 2

#### **Related commands**

mad bfd enable

## mad nd enable

Use mad nd enable to enable ND MAD.

Use undo mad nd enable to disable ND MAD.

#### Syntax

mad nd enable

undo mad nd enable

#### Default

ND MAD is disabled.

#### Views

VLAN interface view

Management Ethernet interface view

#### **Predefined user roles**

network-admin

#### **Usage guidelines**

Do not configure ND MAD together with LACP MAD or BFD MAD, because they handle collisions differently.

Category	Restrictions and guidelines
ND MAD VLAN	<ul> <li>Do not enable ND MAD on VLAN-interface 1.</li> <li>If you are using an intermediate device, perform the following tasks:         <ul> <li>On the IRF fabric and the intermediate device, create a VLAN for ND MAD.</li> </ul> </li> </ul>
	<ul> <li>On the IRF fabric and the intermediate device, assign the ports of ND MAD links to the ND MAD VLAN.</li> </ul>
	• On the IRF fabric, create a VLAN interface for the ND MAD VLAN.
	• If no intermediate device is used, connect each IRF member device to all other member devices.

When you configure ND MAD on a VLAN interface, follow these restrictions and guidelines:

Category	Restrictions and guidelines
	• As a best practice, do not use the ND MAD VLAN for any other purposes.
ND MAD and feature configuration	If an intermediate device is used, make sure the following requirements are met:
	• Run the spanning tree feature between the IRF fabric and the intermediate device to ensure that there is only one ND MAD link in forwarding state. For more information about the spanning tree feature and its configuration, see <i>Layer 2—LAN Switching Configuration Guide</i> .
	• Enable the IRF fabric to change its bridge MAC address as soon as the address owner leaves.
	• If the intermediate device is also an IRF fabric, assign the two IRF fabrics different domain IDs for correct split detection.

When you configure ND MAD on a management Ethernet port, follow these restrictions and guidelines:

Category	Restrictions and guidelines
Management Ethernet ports for ND MAD	Connect a management Ethernet port on each member device to the common Ethernet ports on the intermediate device.
ND MAD VLAN	On the intermediate device, create a VLAN for ND MAD, and assign the ports used for ND MAD to the VLAN. On the IRF fabric, you do not need to assign the management Ethernet ports to the VLAN.
ND MAD and feature configuration	• Enable the IRF fabric to change its bridge MAC address as soon as the address owner leaves.
	• If the intermediate device is also an IRF fabric, assign the two IRF fabrics different domain IDs for correct split detection.

When you use the **mad nd enable** command, the system prompts you to enter a domain ID. If you do not want to change the current domain ID, press **enter** at the prompt.

An IRF fabric has only one IRF domain ID. You can change the IRF domain ID by using the following commands: **irf domain**, **mad enable**, **mad arp enable**, or **mad nd enable**. The IRF domain IDs configured by using these commands overwrite each other.

#### **Examples**

# Enable ND MAD on VLAN-interface 3.

```
<Sysname> system-view
[Sysname] interface vlan-interface 3
[Sysname-Vlan-interface3] mad nd enable
You need to assign a domain ID (range: 0-4294967295)
[Current domain is: 0]: 1
The assigned domain ID is: 1
```

#### **Related commands**

irf domain

## mad restore

Use mad restore to restore the normal MAD state of the IRF fabric in Recovery state.

#### Syntax

mad restore

#### Views

System view

#### **Predefined user roles**

network-admin

#### **Usage guidelines**

If the active IRF fabric has failed to work before the IRF split problem is fixed, use this command to restore an IRF fabric in Recovery state. The recovered IRF fabric will take over the active IRF fabric role.

#### Examples

# Restore the normal MAD state of the IRF fabric in Recovery state.

<Sysname> system-view

[Sysname] mad restore

```
This command will restore the device from multi-active conflict state. Continue? [Y/N]:Y Restoring from multi-active conflict state, please wait...
```

## port group interface

Use port group interface to bind a physical interface to an IRF port.

Use undo port group interface to remove the binding of a physical interface to an IRF port.

#### Syntax

port group interface interface-type interface-number

undo port group interface interface-name

#### Default

No physical interfaces are bound to an IRF port.

#### Views

IRF port view

#### **Predefined user roles**

network-admin

#### Parameters

interface-type interface-number: Specifies a physical interface by its type and number.

*interface-name*: Specifies a physical interface in the *interface-type interface-number* format. No space is allowed between the *interface-type* and *interface-number* arguments.

#### **Usage guidelines**

Execute this command multiple times to bind multiple physical interfaces to an IRF port. You can bind a maximum of eight physical interfaces to an IRF port. However, you might be unable to bind as many as eight physical interfaces to an IRF port due to hardware restrictions. For more information about IRF physical port restrictions, see the installation guide for the device.

Use the **shutdown** command to shut down a physical interface before you bind it to or remove it from an IRF port. To bring up the physical interface after a binding or binding removal operation, use the **undo shutdown** command.

For more information about IRF port binding requirements, see *Virtual Technologies Configuration Guide*.

#### Examples

# Bind Ten-GigabitEthernet 1/0/51 to IRF-port 1/1 on IRF member 1.

<Sysname> system-view

[Sysname] interface ten-gigabitethernet 1/0/51

[Sysname-Ten-GigabitEthernet1/0/51] shutdown

[Sysname-Ten-GigabitEthernet1/0/51] quit

[Sysname] irf-port 1/1

[Sysname-irf-port1/1] port group interface ten-gigabitethernet 1/0/51

[Sysname-irf-port1/1] quit

[Sysname] interface ten-gigabitethernet 1/0/51

[Sysname-Ten-GigabitEthernet1/0/51] undo shutdown

#### **Related commands**

irf-port